

READ THIS FIRST

We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's *Ringer Equivalence Number*, or REN. The REN is shown on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas), your phones might not ring. If ringer operation is impaired, remove one of the devices from the line.

If your phone causes problems on the phone line, the telephone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. These numbers are shown on the bottom of your phone.

Note: You must not connect your telephone to:

- Coin-operated systems
- Party-line systems
- Most electronic key phone systems

CARE

- Keep the phone dry.
- Handle the phone carefully. Do not drop it.
- Do not use or store the phone in temperature extremes.
- Keep the phone away from dust and dirt.
- Do not modify or tamper with the phone's internal components. Doing so might invalidate the phone's warranty and void your FCC authorization to operate it. If the phone is not operating as it should, take it to your local RadioShack store for assistance. If the trouble is harming the phone lines, the phone company might ask you to disconnect the telephone until you fix the problem.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

We Service What We Sell

04/99



RadioShack®

13-Memory Big-Button Telephone

■ Tone or Pulse (Rotary) Dialing

■ Hold Button with Indicator

■ 13 Number-Memory

■ Adjustable Ringer

■ Redial

■ Flash

■ Pause

■ Hearing-Aid Compatible

RadioShack

 
A Division of Tandy Corporation

Fort Worth, Texas 76102

Owner's Manual


Cat. No. 43-804A **B**

CONNECTING TO PHONE LINE

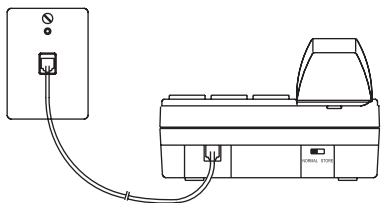


Wall Mounting

 To install bracket for mounting, push in and up.

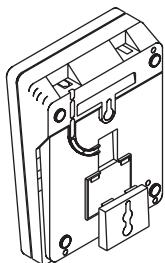


With Wall Plate

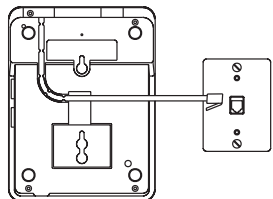 


Handset Holder (Wall Mounting)

 1. Slide the clip up.
2. Rotate it and slide it back into the slot so it locks.

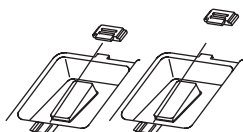


Without Wall Plate

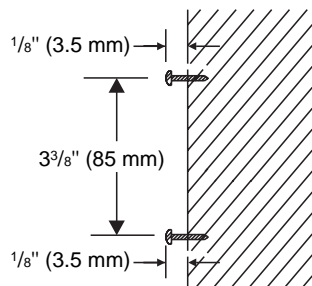 

Note: The USOC number of the jack to be installed is RJ11C (RJ11W for a wall jack).

 USING THE PHONE

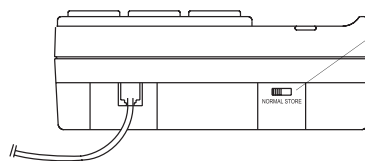

Adjust **VOLUME** to the level you want to hear through the handset.

NORMAL/STORE — See "Storing/Dialing Numbers in Memory."

Use a paper clip or other pointed object to lift the plastic cover, then record your stored numbers here.

Press to disconnect a call.

Set **RINGER** to **HIGH** or **LOW**, or to **OFF** to not sound at all. You can make calls with the ringer off, and you can receive calls if you hear another phone on the same line ringing.

Switch to **TONE** or **PULSE** to match the type of service you have.

Press **REDIAL** to dial the last number dialed (up to 31 tone or 32 pulse digits).

Lights when a call is on hold.

Press **HOLD** to place a call on hold. To release the call from hold, press the switchhook or lift the handset from the switchhook.

Plug the handset cord into the jacks on the handset and base.

Press **PAUSE** when storing memory numbers for systems that require an access code for an outside line.

Press **FLASH** instead of the switchhook for special services such as Call Waiting.

STORING/DIALING NUMBERS IN MEMORY

To store a number (up to 15 tone or 16 pulse digits) in memory:

1. Lift the handset and set **NORMAL/STORE** on the back of the phone to **STORE**.

Note: A **FLASH** or **PAUSE** entry counts as 1 digit.

2. Enter the telephone number you want to store.
3. To store the number in a priority memory, press **M1**, **M2**, or **M3**. For standard memories, press **MEMORY** then enter the 2-digit number (01–10) for the location where you want to store the number.
4. To store more numbers, repeat Steps 2–3. Then set **NORMAL/STORE** to **NORMAL**.

To dial a number in a priority memory:

1. Lift the handset.
2. Press the priority button (**M1**, **M2**, or **M3**) for the number you want to call.

To dial a number in standard memory:

1. Lift the handset.
2. Press **MEMORY**.
3. Enter the 2-digit location number for the number you want to call.

© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol is intended to alert you that parts inside the telephone present a risk of electric shock.



This symbol is intended to alert you to important operating and servicing instructions included in the papers with the telephone.